

FILTER CLEANING INSTRUCTION



When to intervene?

A clogged filter results in a significant flow reduction.

Why intervene?

Regular cleaning of the angle valve helps extend the service life of the product by preserving its internal components as well as the connected downstream device.

How to intervene?

Clean one filter valve at a time. Before removing the filter cap, ensure the water supply has been shut off.

Once the supply is closed, proceed to unscrew the filter cap.

After removing the filter cap, rinse it thoroughly under running water.

Once cleaned, reassemble the filter cap and restore the water flow once proper assembly is confirmed.

Repeat the same steps for the second angle valve.

ILLUSTRATIONS





